

# INDEX OF FUNCTIONS

PLATE NUMBERS	FUNCTIONS
1 - 11	EARTH
12 - 23	NAVIGATION
24 - 27	AIR BAG AND SEAT BELT PRETENSIONERS
28 - 30	ALARM
31 - 32	CIGARETTE LIGHTER
33 - 34	ANTI-LOCK BRAKING SYSTEM AND DIRECTIONAL STABILITY CONTROL
35	ABS AND VEHICLE SPEED
36 - 37	HORN
38 - 39	AUTOMATIC TRANSMISSION
40	ADDITIONAL PASSENGER COMPARTMENT HEATING
41	BASIC HEATING
42 - 43	STARTER AND CHARGE CIRCUIT
44	INSTRUCTORS DUAL CONTROL UNIT
45	UNDER STEERING WHEEL CONTROL
46 - 65	DOOR LOCKING
66 - 67	AIR CONDITIONING
68 - 69	HEADLIGHT HEIGHT ADJUSTMENT
70	REAR WINDOW DE-ICING
71	ELECTRIC POWER ASSISTED STEERING
72	FRONT AND REAR GROUND LIGHTING
73	COURTESY MIRROR LIGHTING
74	COURTESY LIGHT AND LUGGAGE COMPARTMENT LIGHTING
75 - 76	DRIVER'S POSITION LIGHTING DIMMER
77 - 78	STORAGE COMPARTMENT LIGHTING
79 - 82	FRONT AND REAR SCREEN WASHER/WIPERS
83 - 84	REAR FOGLIGHTS
85	FRONT FOGLIGHTS
86 - 88	REVERSING LIGHTS
89 - 92	SIDE DIPPED MAIN BEAM HEADLIGHTS
93 - 96	BRAKE LIGHTS
97 - 98	DIRECTION INDICATORS AND HAZARD WARNING LIGHTS
99	OIL LEVEL INDICATOR
100 - 101	EXTERNAL TEMPERATURE INDICATOR
102 - 111	ELECTRONIC INJECTION
112	ELECTRONIC INJECTION SECTION 1
113	ELECTRONIC INJECTION SECTION 2
114 - 115	FUEL PUMP AND SENDER UNIT
116 - 117	HANDS-FREE KIT
118	HEADLIGHT WASHERS
119 - 121	CARD READER AND STEERING COLUMN LOCK
122 - 123	REAR ELECTRIC WINDOWS
124 - 128	FRONT ELECTRIC WINDOWS
129	BATTERY EARTH TERMINAL
130 - 132	PASSENGER COMPARTMENT FUSE BOARD
133 - 134	ENGINE FUSE BOARD
135	RADIO PRE-EQUIPMENT
136 - 137	DIESEL PRE AND POSTHEATING
138 - 139	DIAGNOSTICS SOCKET
140 - 160	RADIO AND PERIPHERALS COMMUNICATION

# INDEX OF FUNCTIONS

PLATE NUMBERS	FUNCTIONS
161	DIESEL FILTER HEATER
162 - 163	ENGINE COOLING SYSTEM
164 - 165	SPEED REGULATOR
166 - 183	MULTIPLEX NETWORK
184	AUTO-DIMMING INTERNAL REAR-VIEW MIRROR
185 - 189	ELECTRIC DOOR MIRRORS AND EXTERIOR TEMPERATURE
190 - 191	HEATED SEATS
192	INSTRUMENT PANEL
193	OIL PRESSURE WARNING LIGHT
194	BRAKE FLUID AND HAND BRAKE WARNING LIGHTS
195 - 197	ELECTRIC SUNROOF
198 - 200	UCH
201	ENGINE SWITCHING PROTECTION UNIT
202	ENGINE INTERNAL SECTION SWITCHING PROTECTION UNIT
203 - 204	KEYLESS VEHICLE AND HANDS-FREE ACCESS
205 - 207	VEHICLE SPEED